



Instruction Booklet 사용설명서



IONIC QUICK DRYER

VSD1512BK

VS SASSOON IONIC QUICK DRYER

Powerful and fast drying, well balanced and lightweight. The IONIC QUICK DRYER is an essential tool for all hair types.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

SAFETY PRECAUTIONS

WARNING: The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children.

Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.

WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

1. If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off. To ensure additional protection, have installed in your bathroom a residual current device (RCD) with a nominal trip current no higher than 30 mA. Ask your electrical fitter for advice.
2. Never immerse the unit in water or any other liquid.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. When using the unit, make sure the unit's air vent is not blocked. Make sure there is no hair or any other dirt obstructing the unit's rear filter.
5. This unit has been equipped with a temperature cut-out. If the unit overheats, it will shut off automatically or will stop heating. If this happens, slide the switch on the unit's handle into the OFF position, unplug the unit and allow it to cool for 10 minutes. BEFORE using it again, make sure there is no hair or any other dirt in the unit's rear filter. Plug the unit in and switch it on. If it overheats again, stop using it immediately, switch it off and unplug it. Return the unit to the VS SASSOON service center.
6. Do not use the unit if it has fallen or if it appears to be damaged.
7. Do not leave the unit unattended when it is plugged in or switched on.
8. Unplug the unit immediately if you have problems when using it.
9. Do not use any accessories other than those recommended by manufacturer.
10. Unplug the unit after each use and before cleaning it.
11. Avoid any contact between the unit's hot surfaces and your skin, in particular, your ears, eyes, face and neck.
12. This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by



persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.

13. Allow the unit to cool before storing.
14. To prevent damage to the cord, do not wrap it around the unit and ensure it is stored without twisting or folding it.

GET TO KNOW YOUR IONIC QUICK DRYER



HOW TO USE THE CONCENTRATOR NOZZLE

The concentrator nozzle is great for straightening or styling hair with a brush. Use the professional concentrator nozzle for directing the air just where you want it. For additional control use one of the lower settings and point the air-flow along the surface of the hair to be dried.

IONIC TECHNOLOGY

Many aspects of modern living, including air conditioning, contact with man-made fibres and air pollution contribute to a build-up of static electricity in the hair. Even brushing and towel drying the hair, can increase these levels causing the surface of the cuticle to become rough. Consequently, hair may have a dull appearance. High levels of static charge cause hair to become "fly-away" and difficult to style. The ion generator in this dryer produces a stream of negative ions which act to neutralize the static charge, smoothing the scales on the cuticle for shiny, smooth and manageable hair so you can achieve your desired style easily.

STYLING TIPS

VOLUME

Create tousled natural-looking waves with lots of volume by using your dryer without the nozzle. Flip your head upside down. Grasp your hair at the roots & scrunch between your fingertips whilst drying. When dry, finger comb to arrange your hair as required. Remember to keep it casual & tousled for maximum volume.

STRAIGHTENING

Create a smooth straight look by using your dryer with the ultra-slim concentrator nozzle. Divide your hair into sections & hold the hair taut using a brush whilst directing the airflow down the hair shaft.

REFRESH

Refresh your style by giving the roots a quick blast of hot air & finish with the cool setting for the best results.

EXPERT TIP

Set your style by finishing with the cool shot or setting. Finish with a spritz of light hold hair spray, for extra hold if needed.

CLEANING THE FILTER

- Ensure the appliance is switched off, unplugged and cool.
- Using a soft brush, clean any hair and other debris from the filter.

OPERATING INSTRUCTIONS

- Wash, condition and towel dry your hair.
- Make sure the switch is set to the off ('0') setting before plugging into a suitable power outlet.
- There are 3 heat / 2 speed settings.
- Use the high heat and high speed setting for initial drying or drying thick, hard to dry hair.
- Switch to the warm setting as the hair begins to dry and for styling and scrunch drying.
- If your hair is very fine and damaged, it may be best to use the low heat setting.
- To finish, use the cool shot button to rapidly cool the hair and set the style in place.
- After use, switch off and unplug the appliance. Allow to cool before storing away.

USER MAINTENANCE

Your dryer is virtually maintenance-free. No lubrication is needed. For proper operating performance, the dryer must be kept clean. Blocked or clogged air intake vents will cause the dryer to overheat. When cleaning is needed, unplug the cord, and clean dust and lint from air intake openings with a small brush or the brush attachment of a vacuum cleaner. The outer surface of the dryer should be wiped clean with a damp cloth only.

CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the dryer, causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if damage is visible or unit stops or operates intermittently.

STORAGE

When not in use, your dryer should be disconnected and stored in a safe, dry location, out of reach of children. Do not wrap line cord around dryer.


THE DATE CODE MENTIONED

WWYYXXX was mentioned on unit as manufactured date so you can see W as week and Y as year for your reference.



CONTINENTAL CONAIR LIMITED CHINA CREATIVE DEPARTMENT

Date	4/23/2021
Customer	VS-HK
Model No.	VSD1512BK
Description	IB
Job No.	
Reference No.	IB-20/060A
Revision No.	0
Color	1C + 1C (Black)
Open Size	552mm(W) x 214mm(H)
Folded Size	92(W) x 214(H) / mm
Material	80gsm Artpaper
Prepared by	Betty Bai
Approved by	Ken Xiong/Francesca Seo
Designer	
Vendor	LeiTai
Supplier	

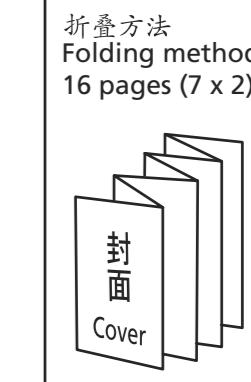

수입 판매원

콘에어코리아트레이딩주식회사

소비자상담실: 1899-0209
A/S센터: 자사의 A/S대행업체인 필일렉
www.fillelec.co.kr의 홈페이지를 통해서 가까운 A/S센터(전국 38개점)를 확인하세요

Conair Korea Trading Limited
www.vidalsassoon.kr

Certain trademarks used under license from The Procter & Gamble Company or its affiliates.

VSD1512BK

IB-20/060A

VS SASSOON IONIC QUICK DRYER

가벼운 무게로 강력하고 빠른 드라이를 경험해 보십시오. 본 기기는 모든 헤어 타입에 사용하실 수 있습니다.

주요 안전 주의사항

제품 사용 시, 특히 어린이가 있을 경우 다음의 안전 주의 사항을 반드시 준수 하십시오.

사용 전 반드시 사용 설명서를 숙지 하십시오. 물에 닿거나 빠뜨리지 마십시오.

안전 주의사항

경고: 제품 포장에 사용된 폴리에틸렌 재질의 포장재는 어린이가 사용하기에 위험할 수 있으니 어린이의 손이 닿지 않는 안전한 곳에 두십시오.

유아 및 어린이 침대, 유모차, 하이체어, 어린이 놀이 지역 안에서는 절대 사용하지 마십시오. 얇은 막의 필름이 코나 입에 붙어 질식을 유발할 수 있습니다. 포장재는 장난감이 아닙니다.



경고: 이 제품을 욕조, 샤워실, 세면대 등 물이 닿기 쉬운 곳에서 사용하지 마십시오.

- 부득이 욕실 등 물이 있는 곳에서 사용하실 경우, 사용 후 반드시 플러그를 뽑아 주십시오. 전원 스위치가 꺼져있더라도 본 제품이 물 가까이에 있을 경우 위험할 수 있습니다. 보다 안전한 사용을 위하여 욕실의 잔류 전류 용량은 30mA 이하여야 합니다. 욕실 등에서 사용시 위 사항을 참조하여 전문가와 상의하시기 바랍니다.
- 본 제품을 절대로 물 또는 다른 액체에 담그거나 빠뜨리지 마십시오.
- 전원코드가 손상된 경우 사용을 중단하시고 위험 방지를 위해 반드시 서비스 센터에 연락하여 수리를 받으셔야 합니다.
- 사용 시 공기 투입구가 막히지 않았는지 확인 하십시오. 또한 후면 필터가 먼지나 머리카락으로 막혀있지 않은지 확인 후 사용하십시오.
- 본 제품에는 온도 조절장치가 장착되어 있습니다. 만약 제품의 온도가 지나치게 상승하게 되면 온도 조절장치에 의해 자동으로 전원이 꺼지거나 열이 더 이상 공급되지 않습니다. 이와 같이 제품이 자동으로 전원이 차단된

경우, 스위치를 OFF로 설정하고 10분 정도 열을 식힌 후 다시 사용하기 바랍니다. 사용 전에는 후면의 필터가 먼지나 머리카락으로 막히지 않았는지 확인 하시기 바랍니다. 과열이 지속될 경우 즉시 사용을 중단하시고 반드시 서비스센터에 연락하시기 바랍니다.

- 떨어뜨리거나 손상된 기기는 사용을 중단하십시오.
- 플러그가 연결되어 있거나 전원이 켜진 상태로 기기를 방치하거나 자리를 비우지 마십시오.
- 사용 중 이상이 발견된 경우 바로 사용을 중단하시고 전원을 끄고 플러그를 뽑으십시오.
- 제조업체가 공급하는 부품 외의 부품은 사용하지 마십시오.
- 제품 사용 후와 세척 전 반드시 전원을 끄고 플러그를 빼십시오.
- 고온상태의 기기 표면이 피부(특히 귀, 눈, 얼굴, 목)에 닿지 않도록 주의하십시오.
- 본 제품은 영유아, 어린이, 심신박약자, 심신상실자, 정신질환자, 사용 경험이 없거나 사용이 미숙한 사람 등에 의해 사용되어서는 안되며, 사용시엔 반드시 안전을 책임질 수 있는 보호자의 지도하에 사용하도록 합니다. 특히 어린이가 장난감처럼 사용하지 않도록 각별한 주의 바랍니다.
- 제품 보관 시에는 충분히 제품의 표면이 식은 상태에서 보관하십시오.
- 전원코드의 손상을 막기 위해 코드를 꼬거나 제품에 돌돌 말아 보관하지 마십시오.

제품 상세



슬림 집중 노즐

슬림 집중 노즐과 브러시를 사용하여 원하시는 스타일링이 가능합니다. 전문가 급의 집중 노즐은 원하시는 부분에 정확히 바람이 닿을 수 있도록 합니다. 정교한 스타일링 시에는 낮은 온도/낮은 속도로 설정하여 모발의 표면을 따라 드라이해 주십시오.

이온 케어

에어컨, 인공 섬유와의 접촉 및 대기 오염 등 현대 사회에서 쉽게 접할 수 있는 사소한 것들이 모발에 정전기를 발생시킵니다. 머리를 빗거나 수건으로 머리를 말리는 것도 큐티클 표면을 거칠게 만들어 결과적으로 모발이 거칠고 부스스해 보이게 하는 원인이 될 수 있습니다. 본 기기의 이온 케어는 음이온 스트림을 생성하여, 정전기를 중화, 큐티클 층을 부드럽게 진정시켜 윤기 있고 부드러운 모발로 스타일링을 원활하게 도와드립니다

스타일링 가이드

볼륨 스타일

집중 슬림 노즐을 뺀 상태로 드라이를 하면 풍성한 볼륨을 만들 수 있습니다. 머리를 앞으로 숙여 머리카락을 앞쪽으로 쓸어 내린 후 뿌리 쪽에 손가락을 넣어 털면서 드라이하십시오. 풍성한 볼륨을 위해 별도의 빗질은 하지 마시고 손가락을 사용하여 마무리 하십시오.

스트레이트 스타일

자연스러운 스트레이트를 완성하기 위해서는 슬림집중 노즐을 끼워 드라이어를 준비하십시오. 머리카락을 적당량으로 나눈 후 브러시를 사용하여 머리를 팽팽하게 당긴 상태에서 드라이기 바람을 수직으로 불어넣으십시오.

스타일 고정

모발의 뿌리에 뜨거운 바람 혹은 쿨샷 버튼을 이용한 차가운 바람을 빠르게 불어넣어 스타일을 완성하십시오.

전문가 팁

쿨샷 버튼을 눌러 차가운 바람으로 스타일을 마무리하십시오. 필요에 따라 가벼운 헤어스프레이를 뿌려 지속력을 높이십시오.

필터 세척

- 세척 전 기기가 충분히 식었는지, 전원이 꺼져있는지, 플러그가 뽑혀있는지 확인 하십시오.
- 부드러운 세척용 브러시를 사용하여 필터에 있는 머리카락이나 먼지 등을 닦아 주십시오.

사용 방법

- 샴푸 후 타월 드라이로 물기를 제거해 주십시오.
- 전원 플러그를 꽂기 전에 전원 버튼이 'OFF(0)'로 되어 있는지 확인 하십시오.
- 본 제품은 3단 온도/ 2단 속도 설정이 가능합니다.
- 타월 드라이 후 혹은 모발이 두껍거나 머리가 잘 마르지 않는 분들은 가장 높은 온도와 빠른 속도로 설정하여 머리를 말려주십시오.
- 만약 모발이 가늘고 얇거나 손상모일 경우에는 낮은 온도로 천천히 말리십시오.
- 마무리 단계에서는 쿨샷 버튼을 사용하여 차가운 바람을 불어넣어 스타일을 고정하십시오.
- 사용 후에는 스위치를 완전히 끈 상태에서 플러그를 뽑고 충분히 식힌 상태에서 보관하십시오.

유지 및 관리

본 제품은 별도의 유지 보수를 필요로 하지 않습니다. 또한 윤활제를 사용하실 필요가 없습니다. 제품의 올바른 작동을 위해서 반드시 깨끗한 상태로 유지 하십시오. 공기 투입구가 막히거나 차단된 경우 드라이기 과열의 원인이 됩니다. 세척이 필요한 경우, 전원을 차단하고 공기 투입구를 개봉하여 청소용 브러시를 사용하여 먼지를 제거하십시오. 기기의 표면은 젖은 천으로 부드럽게 닦아 주십시오.

주의

절대로 전원코드를 잡아당기거나 꼬는 등 심하게 구부리지 마십시오. 절대로 전원코드를 기기에 돌돌 말아 보관하지 마십시오. 이는 전원코드의 손상 및 파열, 합선 문제를 발생 시킬 수 있습니다. 수시로 전원코드를 확인하시고 손상된 경우 즉시 사용을 중단하십시오.

보관

기기를 사용하지 않으실 때는 전원을 차단하고 코드를 뽑아 어린이의 손이 닿지 않는 안전하고 건조한 장소에 보관하십시오. 전원코드를 기기에 감지 마십시오.

제조일 표기

제조일은 본 제품에 WWYYXXX형태로 표기되어 있습니다. W는 '주 수', Y는 '년도'를 나타냅니다.

제품 품질 보증서

성명	
전화번호	/휴대폰번호
e-mail	
주소	
구입일자(년/월/일)	
모델번호(사용설명서 앞면 표기)	
대리점명(구입처)	

■ 주의사항

- 서비스를 받고자 하실때는 이 보증서와 구입 영수증을 제시하여 주십시오.
- 제품 구입일자가 고쳐지거나, 지워졌을 경우에 본 보증서는 무효입니다.
- 이보증서를 분실하실 경우, 재발행되지 않습니다.

본 보증서는 보관하십시오

■ 품질 보증의 조건

- 본 제품의 품질보증 기간은 구입 일자로부터 2년간 입니다.
- 일상적인 사용에 의한 제품의 마모나, 마멸 또는 천재지변에 의한 제품의 손상 및 사용 설명서 상의 주의사항을 따르지 않고 임의로 사용하거나, 취급부주의로 인한 고장 등에 대해서는 본 보증서에 의한 무상 서비스를 받을 수 없습니다.
- 품질 보증서 상의 보증기간 내에는 제조상 또는 제철상의 결함으로 발생한 불량 등에 대하여 무상 서비스를 받을 수 있으며 폐사의 판단에 따라 부품의 교환 또는 제품의 교환도 가능합니다.
- 본 보증서의 효력은, 품질 보증서와 보증 등록서상의 대리점의 판매 확인과 제품구입 후 4주 이내 보증등록서가 고객 서비스 센터에 우송 되었을 때로부터 발생 합니다.
- 본 제품 품질보증은 수입판매원의 관할 이외 지역과 적법하게 위임 받지 않은 판매처의 보증일 경우 효력을 상실합니다.

서비스를 받으시고자 할 경우 보증서의 내용을 기록하여 제품과 함께 보내주십시오.

수입 판매원

필에어코리아(주)이동주식회사
소비자상담실 : 1899-0209
A/S센터 : 자사의 A/S대행업체인 필일렉 www.fillelec.co.kr의 홈페이지를 통해서 가까운 A/S센터(전국 38개점)를 확인하세요